


Coleman Propane Stove Usage Information

**Do not cook in the van! It can cause a fire. Cook in a well-ventilated area.
Be cautious of the hot surfaces and be safe.**

⚠ DANGER



• **CARBON MONOXIDE HAZARD**

- For outdoor use only.
- Never use inside house, camper, tent, vehicle or other unventilated or enclosed areas. This stove consumes air (oxygen). Do not use in unventilated or enclosed areas to avoid endangering your life.

■ NOTE: Use Coleman 16.4 oz. disposable propane cylinders. The LP-gas cylinder(s) used with stoves must be constructed and marked in accordance with the specifications for LP-gas cylinders of the U.S. Department of Transportation or Transport Canada, CAN/CSA B339.

■ Remove components from carton. (Fig. 1)



■ To open the lid, pull the latch release located below the latch. (Fig. 2)



■ Assemble windbaffles to lid. (Fig. 3)



■ You may lower one wind baffle to serve as a light utensil tray. (Fig. 4)



■ Install pot support as shown. (Fig. 5)



■ Close both burner valves firmly. (Fig. 6)



■ Screw regulator into stove hand tight. (Fig. 7)

■ Remove plastic cap from top of propane bottle and screw propane bottle into regulator hand tight. (Fig. 8)



■ Propane cylinder correctly installed. (Fig. 9)

■ Never operate stove with propane cylinder in an inverted position. (Fig. 10)



Leak Check

⚠ WARNING

- Perform leak test outdoors.
- Extinguish all open flames.
- NEVER leak test when smoking.
- Do not use the outdoor stove until connection has been leak tested and does not leak.

⚠ WARNING

BURN HAZARD

- Never leave stove unattended when hot or in use.
- Keep out of reach of children.

Standard ignition stoves

- Set on sturdy, flat surface. For outdoor use only.
- Hold lighted match near burner and open burner valve. (Fig. 11 and Fig. 12)



■ Adjust flame with burner valve. (Fig. 15) Flame should be blue with a hint of yellow on tips.



To Turn Off

■ Close both burner valves firmly. (Fig. 16)



■ For storage or transport, the regulator may be located below the grate. (Fig. 20)



■ To carry the stove, firmly grasp the stove by the hand opening located on the bottom of the stove. (Fig. 21)

