




## Operating panel

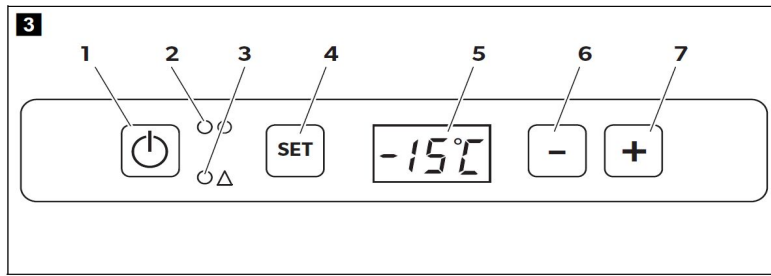

### Setting the Temperature

Ensure cooler is on.

Press “SET” button 1 time and then press the “+” or “-” buttons to select the cooling temperature. Set your cooler to 34°F or 2°C. If you go lower than that you may freeze your food.

The cooling temperature appears in the display for a few seconds. The display flashes several times and then the current temperature is displayed again.

 
### Setting Temperature Mode (Recommended)

To set the cooler to LOW (recommended) Press the set button 3 times and then press the “+” or “-” buttons to select “LO.”

The selected mode then appears in the display for a few seconds. The display flashes several times before it returns to the current temperature.

### Setting the Temperature Units

Press the “SET” button 2 times and then press the “+” or “-” buttons to select Celsius or Fahrenheit. The selected temperature units appear in the display for a few seconds. The display flashes several times and then the current temperature is displayed again.

Item	Description	Explanation
1	ON OFF	Switches the cooler on or off when the button is pressed for between one and two seconds
2	POWER “  ”	Status indication LED lights up green: Compressor is on LED lights up orange: Compressor is off LED flashes orange: display switched off automatically due to low battery voltage
3	ERROR	LED flashes red: Device is switched on but not ready for operation
4	SET	Selects the input mode – Temperature setting – Celsius or Fahrenheit display – Set battery monitor – Set brightness of display – Switch WiFi on or off ( <b>all except</b> CFX28 and CFX65DZ)
5	–	Display, shows the information
6	DOWN –	Press once to decrease the value
7	UP +	Press once to increase the value